


Insulation Design

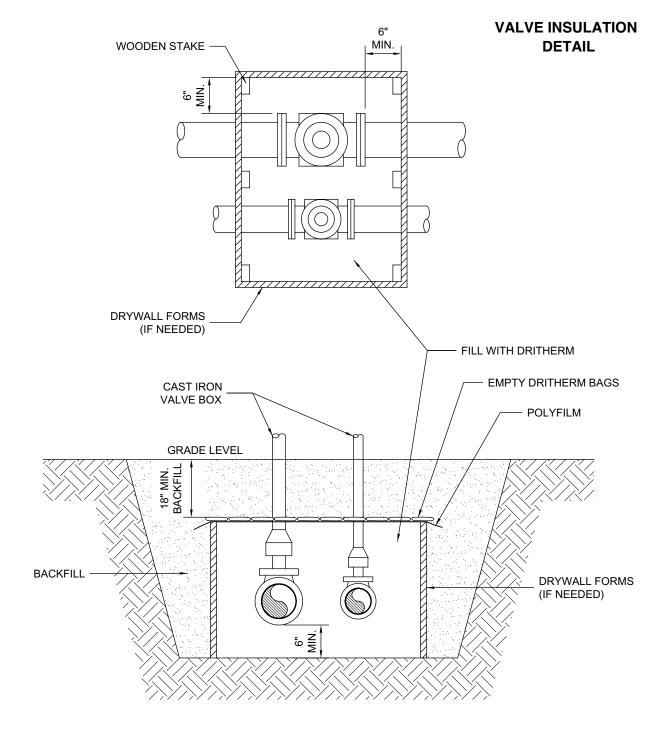

NOTES:

1.) WHERE TRENCHES CAN BE DUG TO PRECISE DIMENSIONS, FORMS MAYBE ELIMINATED.